

IMPORTANT: Due to constant improvements in the design and quality of our vehicles, changes to a vehicle configuration may occur which can affect the Owner's Manual information after the supply for production has already been printed.

A late change to 2022 UFORCE 1000 XL winch assembly required an additional 4500lb. winch capacity rating on page 66 that was not listed in the first supply of 2022 UFORCE 1000 Series Owner's Manuals printed for production.

Please reference the following page image in this addendum for the correct winch capacity on your 2022 UFORCE 1000 XL, and disregard the information on page 66 of the early-print 2022 UFORCE 1000 Owner's Manual, which is inaccurate. Store this addendum with your vehicle's paperwork.

CFMOTO apologizes for the error.

2022 UFORCE 1000 Owner's Manual - Page 66
Revised UFORCE 1000 XL Winch Capacity

CONTROLS AND FEATURES

Shoulder Guards - 11

The vehicle is equipped with shoulder guards to help restrain the body of the driver and passenger inside vehicle.

Cargo Box and Tilt Feature - 12

Refer to the safety decals on the cargo box for load information. The cargo box has a release handle on each side that can be used to tilt the box for maintenance or to dump material.

Winch - 13

This vehicle is equipped with either a 3500-lb winch (UFORCE 1000) or a 4500-lb winch (UFORCE XL 1000). A wireless remote control and a standard winch controller is located in the glove compartment. The winch controller power port is under the hood. To preserve battery power, only operate the winch while the engine is running. Please refer to the winch operation section of this manual for further information or consult with your dealer on the use of the winch before using your vehicle.

Fuel Tank Fill Cap - 14

The fuel tank fill cap is located at the driver side of the vehicle near the driver seat. To fill the tank, grasp the fuel cap firmly, then turn counter-clockwise and remove it. Reinstall the fuel cap securely after a fuel tank fill is completed. The fuel tank capacity is 10.57 gal. (40L).

Side Doors - 15

Side doors are provided on each side of the cab to help arms, legs or shoulders stay inside the vehicle, thus reducing the risk of injuries. (If equipped - available in select countries)